

Read this document carefully before using this device. The guarantee will be expired by device damages if you don't attend to the directions in the user manual. Also we don't accept any compensations for personal injury, material damage or capital disadvantages.

ESC21

SET

 ∇

Order Code : ESC21

R₈HS

Compliant

ENDA

ப

∆⇔

ENDA ESC21 TOUCH BUTTON COOLING/ DEFROST CONTROL DEVICE

Thank you for choosing **ENDA ESC21** temperature controllers.

- ▶ 77 x 33 x 41mm sized with touch buttons.
- ▶ 1 relay output for cooling or heating control.
- ▶ 1 NTC input and 1 digital input
- Ability to use digital input as 2nd NTC input.
- Offset value can be entered for NTC input
- Compressor, energy saving or door alarm control via digital input.
- Delay time and minimum operating time settings for compressor protection.
- Defrost duration and interval time settings.
- Time or evaporator temperature dependent or manual defrost feature
- Selectable smart defrost option.
- Upper and Lower setpoint value limits can be adjusted.
- ► Lower limit, upper limit and delay settings for alarm.
- Energy saving mode activation via digital input.
- ► Temperature unit can be selected °C or °F.
- CE marked according to EN standards.

CONNECTION DIAGRAM



ENDA ESC21 is intended for installation in control panels. Make sure that the device is used only for intended purpose. The electrical connections must be carried out by a qualified staff and must be according to the relevant locally applicable regulations. During an installation, all of the cables that are connected to the device must be free of electrical power. The device must be protected against inadmissible humidity, vibrations, severe soiling and make sure that the operation temperature is not exceeded. The cables should not be close to the power cables or components.





Note:

1) Mains supply cords shall meet the requirements of IEC 60227 or IEC 60245.

2) In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument and it should be easily accessible by the operator.

	ENVIRONMENTAL CONDI	TIONS			
	Ambient/Storage Temperature	0 +50°C/-25 70°C (without icing)			
	Relative Humidity	80% Relative humidity for temperatures up to 31°C, decreasing linearly to 50% at 40°C.			
	Protection Class	According to EN 60529 ; Front Panel : IP65, Rear Panel : IP20			
tice	Height	Max. 2000m			
ou sn	KEEP AWAY device from exposed to corrosive, volatile and flammable gases or liquids and DO NOT USE the device in similar hazardous locations.				
evio	ELECTRICAL CHARACTERISTICS				
ď	Supply Voltage	230V AC +%10 -%15, 50/60Hz			
ime	Power Consumption	Max. 0.65VA			
¥	Connection	2.5mm ² screw-terminal connections			
ar	Line Resistance	Max. 100ohm			
nge	Data Protection	EEPROM (Min. 10 years)			
hai	Analog Inputs	NTC Resistive Sensor: -60+99°C (-76 +302.0°F) range scale, ± 1% (full scale)			
ē	Measurement Field	±1 digit accuracy, EN 60751			
an b	Time Accuracy	±%1sec.			
p	Display	2 digit, 37mm 7 segment,with 7 function icon.			
lar	EMC	EN 61326-1: 2013			
vec	Safety Requirements	EN 61010-1: 2010 (Pollution degree 2, overvoltage category II).			
eser	OUTPUT				
n	Compressor Output	Resistive Load : NO 250V AC 16A, NC 250V AC 16A			
atio		Inductive Load : 1/2np 240V AC			
diffo	Life expectancy for relay	Mechanical 30.000.000; Electrical 300.000 operation. 250V AC, 16A (resistive load)			
ло	CONTROL				
- -	Control Format	Single set-point, door and alarm control			
024	Control Type	On-Off control			
1.2	A/D converter	12-bit accuracy, 100ms sampling time			
7.0	Hysteresis	Adjustable between 0.1 and 20.0 °C			
2	HOUSING				
late	Dimension	Suitable for flush-panel mounting(According to DIN 43 /00).			
0	Dimension	W/ (xH33xU4]mm			
dn	weight	Sug (after packing)			
-	Enclosure Material	Seit extinguisning plastics			
	DO NOT clean the dev	ct when the αevice is switched on. ice with solvent (thinner, gasoline, acid etc.) and / or abrasive cleaning agents.			

DIMENSIONS



SURAN Industrieelektronik An der Hanfrötze 6 / D-77731 Willstätt

33mm

Tel.: +49 (0)7852 / 4889 962 E-mail : info@suran-elektronik.de Internet : www.suran-elektronik.de 1./5 ESC21-E-27012024

Depth



LED/KEY DESCRIPTIONS

LED	Description	KEY	Description				
Ċ	ON/OFFLED - If the LED is on when device is turned "OFF"	SET	Set Key -In "Running Mode", it shows the set value, -In "Programming Mode", displays the value of the selecter parameter and confirms the changed parameter value.				
*	-If the LED is on compressor is running, If the LED is flashing while the compressor protection will be in						
**	Progress. Defrost LED -If the LED is on defrost in progress, If the LED is flashing, dripping will be in progress.		-In "Running Mode", manual defrost start if conditions are suitable -In "Programming Mode", switching between parameters and increase the value of the selected parameter.				
°C	Celcius LED -If the LED is on the unit of measurement for temperature is °C (Celsius) degrees	\bigtriangledown	Down Key -In "Running Mode", it shows the evaporator temperature(P4=1) -In "Programming Mode", switching between parameters and				
°F	Fahrenheit LED -If the LED is on, the unit of measurement for temperature is °F (Fahrenheit) degrees.		ON/OFF Key -In "Running Mode", Turning OFF/ON the device				
6	Energy Saving LED -If the LED is on, the energy saving function is in progress.		-In "Programming Mode", returns to "Running Mode".				
	Warning LED -If the LED is flashing, alarm and failure functions are in progress.						
1. Viewing and Changin	g the Set Value						
PO Measured Value ► S If the SET key is pres	ET \rightarrow - 40 \rightarrow \bigtriangledown \rightarrow - 39 \rightarrow \triangle \rightarrow - 40 sed for 2 seconds in "Running Mode", set value is displayed for 3 s	econds.While in th	nis case, the set value is changed with $\Delta \nabla$ keys.				
2. Viewing Defrost Probe Measurement Value							

 $\begin{array}{c} \text{Measured} \\ \text{Value} \xrightarrow{} \nabla \rightarrow -50 \end{array}$

In "Running Mode" ,if 2nd input type selected as Analog Input (P4=1), pressing ablakey for 5 seconds display shows the measured

3.Locking and Unlocking Keys

90 Measured → SET +∇ → L C Keys are locked.

If SET 🗸 keys are pressed together for 3 seconds or no key is pressed for 1 minute in "Running Mode", LC message will be displayed and keys will be locked.

If the keys are locked and any key is pressed for 2 seconds in "Running Mode" UL message will be displayed and keys wil be unlocked.

4.Manual Defrost

If the Δ key is pressed for 4 seconds in the "Running Mode", the defrost process is started or stopped manually.

1-If parameter d3=0, manual defrost is also disabled.

2 - If the 2nd input type is selected as analog input (P4=i), defrost will not start if the measured value of the defrost probe is greater than the

value in the D2 parameter.

5.Manual Turning ON / OFF The Device

If the wey is pressed for 3 seconds in the "Running Mode" (without the key lock), the display turns off, temperature measurement and control are not performed, the output becomes passive. If the wey is pressed again for 3 seconds, the display turns on and the device continues to measure and control the temperature.

6.Factory Settings

If PS parameter is selected 1 Security Parameter PR is set to -Y4 and the security between the displayed, "---"" message will flash on the screen for 4 seconds, the DF message will return to factory settings and return to "Running Mode".

If PS parameter is selected 0 if first set and then A keys are pressed together for 5 second in "Running Mode" DF message will appear on the display, then the device will return to factory settings and return to "Running Mode".

7.Viewing Revision Date 90 Measurement → SET + O → YY/MM/DD If the SET O keys are pressed together in "Running Mode", revision date will be displayed as YY/MM/DD.

SURAN Industrieelektronik An der Hanfrötze 6 / D-77731 Willstätt Tel.: +49 (0)7852 / 4889 962

E-mail : info@suran-elektronik.de Internet : www.suran-elektronik.de



Failure - Alarm - Info Messages Definitions							
Display	Content	Display	Content				
РЬ	Cabin Probe failure -Check the sensor connection. -Compressor works according to E4 and E5 parameters.	Lc	Key Locked Message -To change the keylock settings, see: Keylock Operations.				
Pd	Defrost Probe Failure -Check the sensor connection. - if ₽Ч=1, defrost will not work.	uL	Key Unlocked Message -To change the keylock settings, see: Keylock Operations.				
RL	Low Temperature Alarm -Check 用口, 用 1, 用己 parameters.		Factory Reset Message The device starts to work according to the factory settings.				
RH	High Temperature Alarm -Check R囗,뮤낵,뮤S parameters.	d۶	Defrost Message -Defrost is in progress. -Check ⊿Б parameter.				
ום	Door Alarm -Check digital input. -Check ,[], , , , , , , , , parameters.						
٦R	Multifunctional Digital Input alarm -Check digital input. -Check , [] , , / parameters.						

PARAMETERS LIST CONFIGURATION PARAMETERS					
PAR.	PARAMETERS DESCRIPTION		MIN	ΜΑΧ	DEE
5P	System control set point value.	°C/°F	r1	r2	4
o1	Cabin probe offset value.	°C/°F	-25	25	0
o2	Evaporator probe offset value (If P4 = 1).	°C/°F	-25	25	0
P1	Decimal Point Selection. 0 : Without decimal 1 : With decimal		0	1	1
P2	Temperature Unit. 0 : °C 1 : °F		0	1	0
P4	Second Input Type 0 : Digital input(door input) 1 : Analog input(evaporator probe)		0	1	0
P8	Temperature value refresh time to be shown on the display.	ds	0	99	5
Ps	Password activation selection for entering the parameter menu. 0: Password is not required when entering the menu 1: Password is required when entering the menu.		0	1	1
	MAIN CONTROL PARAMETERS				
PAR.	PARAMETER DESCRIPTION	UNIT	MIN.	MAX.	DEF.
r0	System control set point hysteresis.	°C/°F	0	30	2
r1	The lower limit of the setpoint.	°C/°F	-60	r2	-40
r2	The upper limit of the set point.	°C/°F	r1	99	50
r4	Working set point increase during the "energy saving mode;" (See also i0 ,I1)	°C/°F	0	99	0
r5	Cooling or heating option. 0: Cooling(Defrost active) 1: Heating(Defrost not active)		0	1	0
	COMPRESSOR PARAMETERS				
PAR.	PARAMETER DESCRIPTION	UNIT	MIN.	MAX.	DEF.
C0	Delay time for the compressor after power is on.	min	0	99	0
C2	Minimum compressor switch-off duration.	min	0	99	3
C3	Minimum duration of compressor switch on time.	sec	0	99	0
C4	Compressor off time during probe failure.	min	0	99	0
C5	Compressor on time during probe failure.	min	0	99	0
	DEFROST PARAMETERS				
DEF.	PARAMETER DESCRIPTION	UNIT	MIN.	MAX.	DEF.
d0	Automatic defrost interval. (if d=0 defrost will not start)	hr	0	99	8
d2	If the evaporator temperature is greater than this value, defrost will not work (P4 must equal 1)	°C/°F	-60	99	25
d3	Defrost duration.	min	0	99	30
d4	Defrost begins with energy. 0 : Defrost doesn't start when the energy comes. 1 : Defrost starts when the energy comes.		0	1	0
d5	Delay time for defrost after power is on.	min	0	99	0
d6	 During defrost display configuration. 0: Cabin temperature is displayed 1: If the cabin temperature is lower than "SP+r0", "SP+r0" is displayed, otherwise cabin temperature is displayed. 2: During defrost, "dF" flashes on the screen. 		0	2	1
d7	Dripping time (During drip time Compressor and Defrost will not work)	min	0	99	0
d8	$\begin{array}{l} \mbox{Defrost activation type(Smart Defrost)} \\ \mbox{0}: The time counter (d0) between two defrosts is decremented regardless of any condition. \\ \mbox{1}: The time counter (d0) between two defrosts is decremented only compressor is running. \end{array}$		0	1	0

DIGITAL INPUT PARAMETERS							
PAR.	PARAMETER DESCRIPTION	UNIT	MIN.	MAX.	DEF.		
iO	Digital Input Option 0 : No action. 1 : Door is open:Compressor's stop until the door closes and (id) flashes on the screen. 2 : Energy saving mode. 3 : External Alarm: The device continues to operate normally ia flashes on the display. 4 : Serious Alarm : Compresser stops andia flashes on the display.		0	4	0		
i1	Type of digital input contact. 0 : Normally open(acvite input with closed contact). 1 : Normally closed(active input with open contact).		0	1	0		
i2	Door is open("id ") display delay time	min	0	99	30		
i3	Digital input delay time.	min	0	99	15		
	ALARM PARAMETERS						
PAR.	PARAMETER DESCRIPTION	UNIT	MIN.	MAX.	DEF.		
A0	High / Low temperatue alarm (AL, AH) hysteresis value.	°C/°F	0	20	2		
A1	Low temperature alarm set point.	°C/°F	-99	99	10		
A2	Low temperature alarm (AL) type. 0 : No alarm. 1 : Alarm set value equals to "SP- A1 " 2 : Alarm set value equals to A1		0	2	1		
A4	High temperature alarm (AH) set point.	°C/°F	-99	99	30		
A5	High temperature alarm (AH) type 0 : No alarm 1 : Alarm set value equals to "SP+A4" 2 : Alarm set value equals to A4		0	2	1		
A6	High temperature alarm message delay time after power is on.	min	0	99	12		
A7	Time delay to display alarm message after alarm is on.	min	0	99	15		
A8	High temperature alarm delay time after defrost.	min	0	99	5		