



Read this document carefully before using this device. The guarantee will be expired by device damages if you don't attend to the directions in the user manual. Also we don't accept any compensations for personal injury, material damage or capital disadvantages.

ENDA EPV241A AC/DC VOLTMETER

Thank you for choosing ENDA EPV241 AC/DC voltmeter.

- * 77 x 35mm sized.
- * 3 digits display.
- * Values between -100V and 100 V can be indicated with one decimal point.
- * For maximum 50V AC/DC measurements;10 times the sensitivity of the measurement values between -50V and +50V with two decimal places to show.
- * Easy to configure with front panel keypad.
- * Multifunctional alarm output (NO+NC) for upper and lower limits.
- * With insulated rs485 ModBus protocol communication feature.(optional)
- * Measuring type can be selected AC, DC or True RMS.

CE **RoHS**
Compliant



Order Code : EPV241A- - -

1-Output
R.....Relay
None...No relay

2-Supply Voltage
230VAC...230V AC
110VAC...110V AC
24VAC.....24V AC
SM.....9-30V DC / 7-24V AC

3-ModBus
RSI..... Insulated ModBus (optional)

Technical Specifications

ENVIRONMENTAL CONDITIONS	
Ambient/stroge temperature	0 ... +50°C/-25 ... 70°C
Max. Relative humidity	Relative humidity 80% for temperatures up to 31°C decreasing linearly to 50% relative humidity at 40°C.
Rated pollution degree	According to EN 60529 Front panel : IP65 , Rear panel : IP20
Height	Max. 2000m



Do not use the device in locations subject to corrosive and flammable gases.

ELECTRICAL CHARACTERISTICS	
Supply	230V AC +10% -20%, 50/60Hz or 24V AC ±10% , 50/60Hz or optional 9-30V DC / 7-24V AC ±10% SMPS
Power consumption	Max. 5VA
Wiring	2.5mm ² screw-terminal connections
Scale	AC and RMS If C.InP; 500 is selected,it is 0V...500V or If C.inP ;50 is selected,it is 0....50V DC If C.InP ;500 is selected, it is -500V DC....500V DC or If C.InP;50 is selected,it is -50V DC....50V DC
Sensitivity	0,01V (If C.InP;50 is selected) 0,1V (If C.inP;500 is selected and higher than -100V or lower than 100V for input values) 1V (If C.INP;500 is selected and lower than -100V or higher than 100V for input values)
Accuracy	AC ±1% (Full scale) (For square wave form ± 2%) DC ±1% (Full scale) RMS ±1% (Full scale) (For square wave form ± 2%)
Input Range	-500V...500V (If C.INP 500 is selected,device breaks down at more than ±1250 DC voltages.) -50V....50V (If clnp 50 is selected,device breaks down at more than ±125 DC voltages.)
Input Impedance	870k
Frequency Range	DC , 10Hz - 200Hz (For square wave form 10Hz-70Hz)
EMC	EN 61326-1: 2006
Safety requirements	EN 61010-1: 2010 (Pollution degree 2, overvoltage category II)

OUTPUTS	
Alarm output	Relay: 250V AC, 8A (for resistive load), NO+NC
Life expectancy for relay	Mechanical 30.000.000 ; Electrical 100.000 operation.


HOUSING	
Housing type	Suitable for flush-panel mounting. (According to DIN 43 700)
Dimensions	W77xH35xD71mm
Weight	Approx. 350g (after packing)
Enclosure material	Self extinguishing plastics.



While cleaning the device, solvents (thinner, benzene, acid etc.) or corrosive materials must not be used.


up to date: 10052019, modification reserved and can be change any time previous notice !

Dimensions

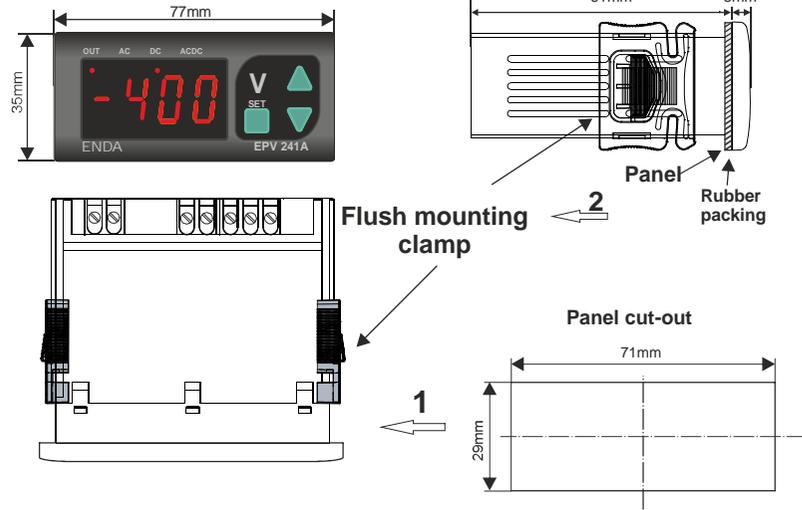


To remove the device from panel:
 - While pushing the the flush-mounting clamp in direction 1, pull out it in direction 2.

- Note :**
- 1) Panel thickness should be maximum 7mm.
 - 2) If there is no 60mm free space at the back side of the device, it would be difficult to remove it from the panel.

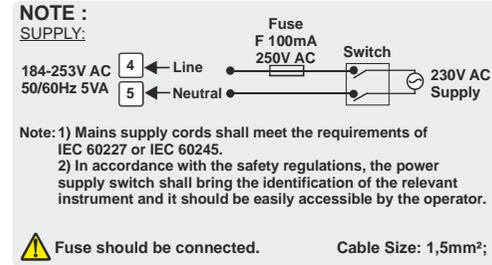

- Equipment is protected throughout by DOUBLE INSULATION
- Holding screw 0.4-0.5Nm.




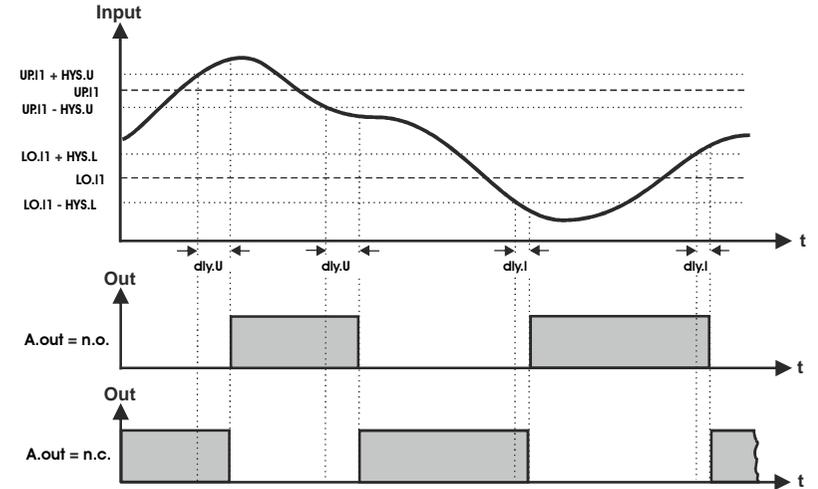


Connection Diagram



ENDA EPV241A is intended for installation in control panels. Make sure that the device is used only for intended purpose. The electrical connections must be carried out by a qualified staff and must be according to the relevant locally applicable regulations. During an installation, all of the cables that are connected to the device must be free of electrical power. The device must be protected against inadmissible humidity, vibrations, severe soiling. Make sure that the operation temperature is not exceeded. The cables should not be close to the power cables or components.

If \bar{C} input type "500" is selected, the measurement terminals 9 and 12 of the terminals must be connected. Otherwise the measurement is done incorrectly.
 If C_{inP} input type "50" is selected, the measurement terminals 10 and 11 of the terminals must be connected. Otherwise the measurement is done incorrectly.

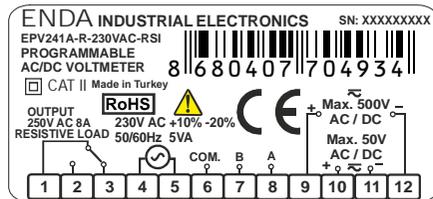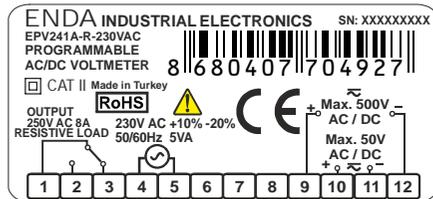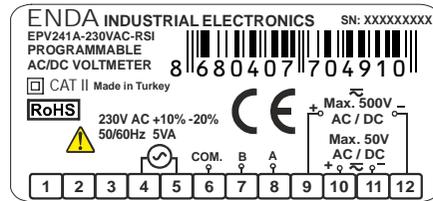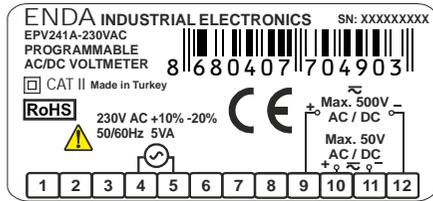


	ac	dc	Ac.dc (rms)
	$A \frac{1}{\sqrt{2}}$	0.000	$A \frac{1}{\sqrt{2}}$
	0.308 A	$A \frac{2}{\pi}$	$A \frac{1}{\sqrt{2}}$
	0.386 A	$A \frac{1}{\pi}$	$A \frac{1}{2}$
	A	0.000	A
	$A \frac{1}{2}$	$A \frac{1}{2}$	$A \frac{1}{\sqrt{2}}$
	$A \sqrt{\frac{d}{T} - \frac{d^2}{T^2}}$	$A \frac{d}{T}$	$A \sqrt{\frac{d}{T}}$
	$A \frac{1}{\sqrt{3}}$	0.000	$A \frac{1}{\sqrt{3}}$

EPV241 PROGRAMMING DIAGRAM




- Increment key** Used for increasing the setpoint value and changing parameters. When held down for a few seconds, configured numeric value increases faster.
- Decrement key** Used for decreasing the setpoint value and changing parameter. When held down for a few seconds, configured numeric value decreases faster.
- Programming key** Used for displaying and configuring the selected parameter value.


ADJUSTING THE ALARM VALUE

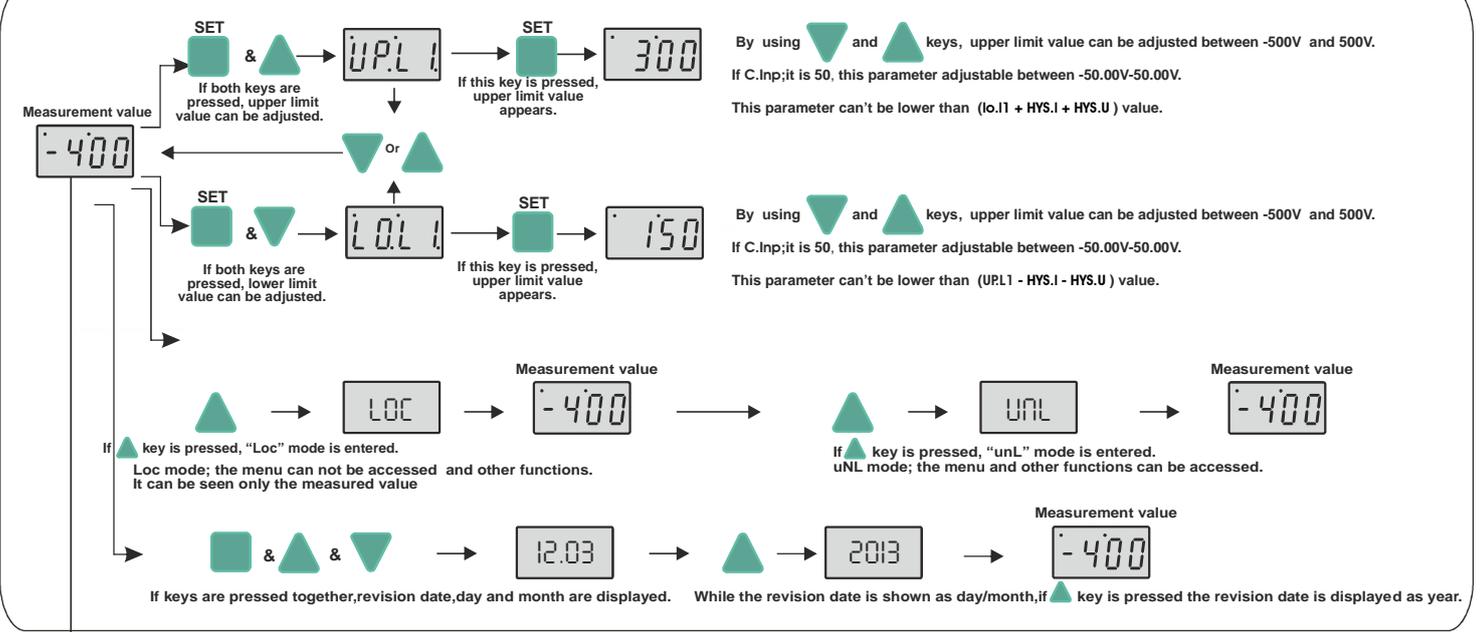

If both **▲** & **▼** keys are pressed and held for 3 seconds, programming mode is entered. If **▼** & **▲** keys are pressed while parameter names are displayed, then it returns to measured value made.

PROGRAMMING MODE

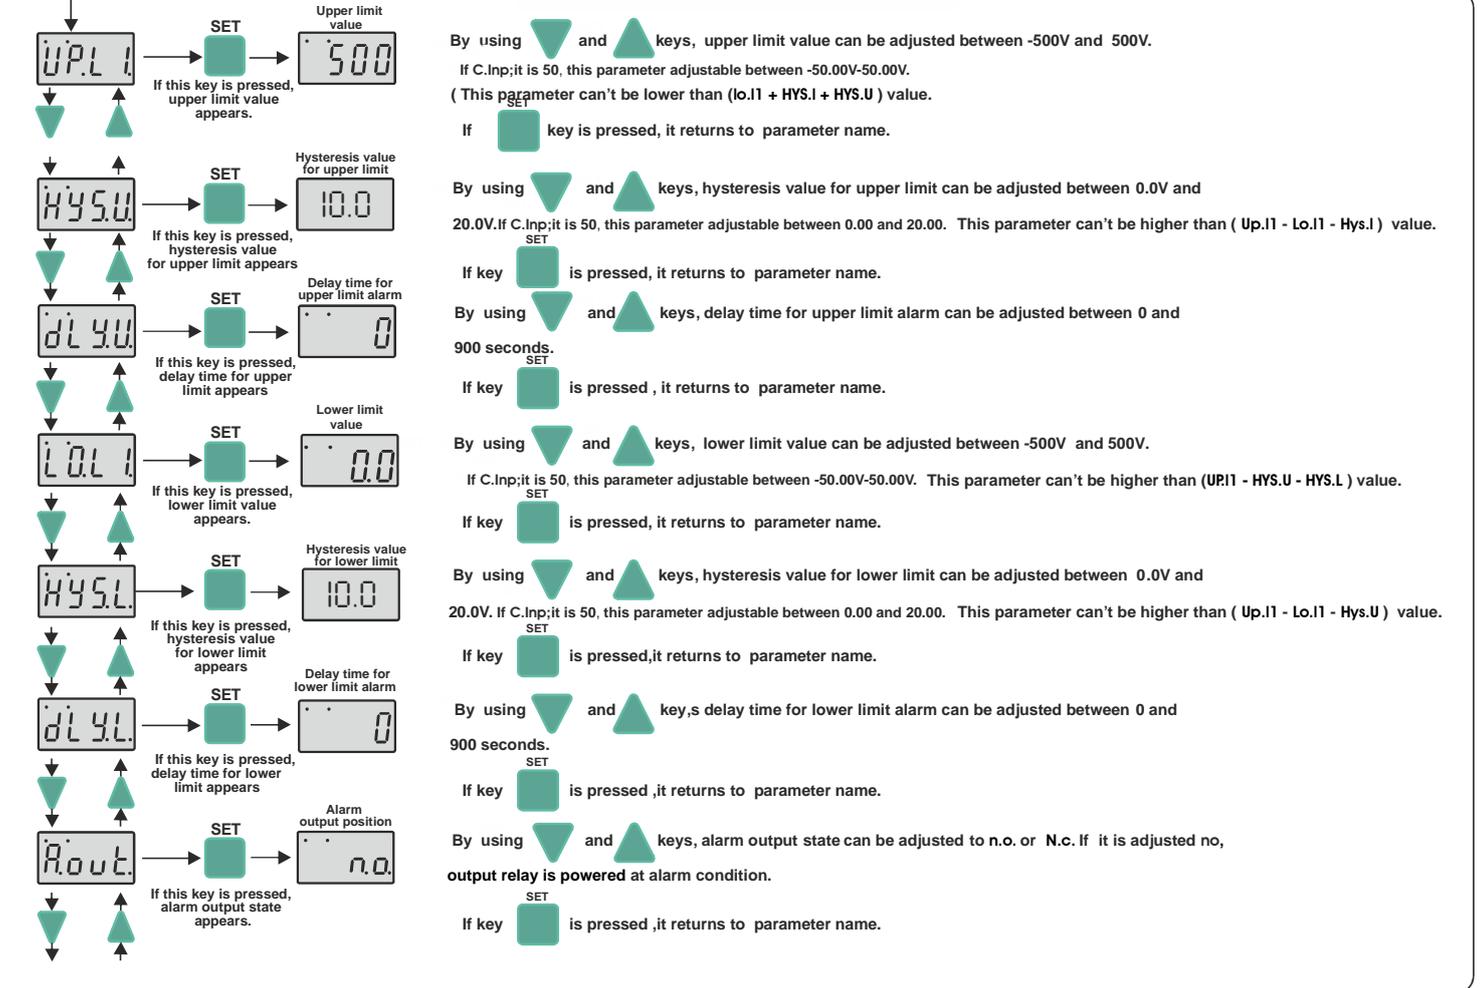

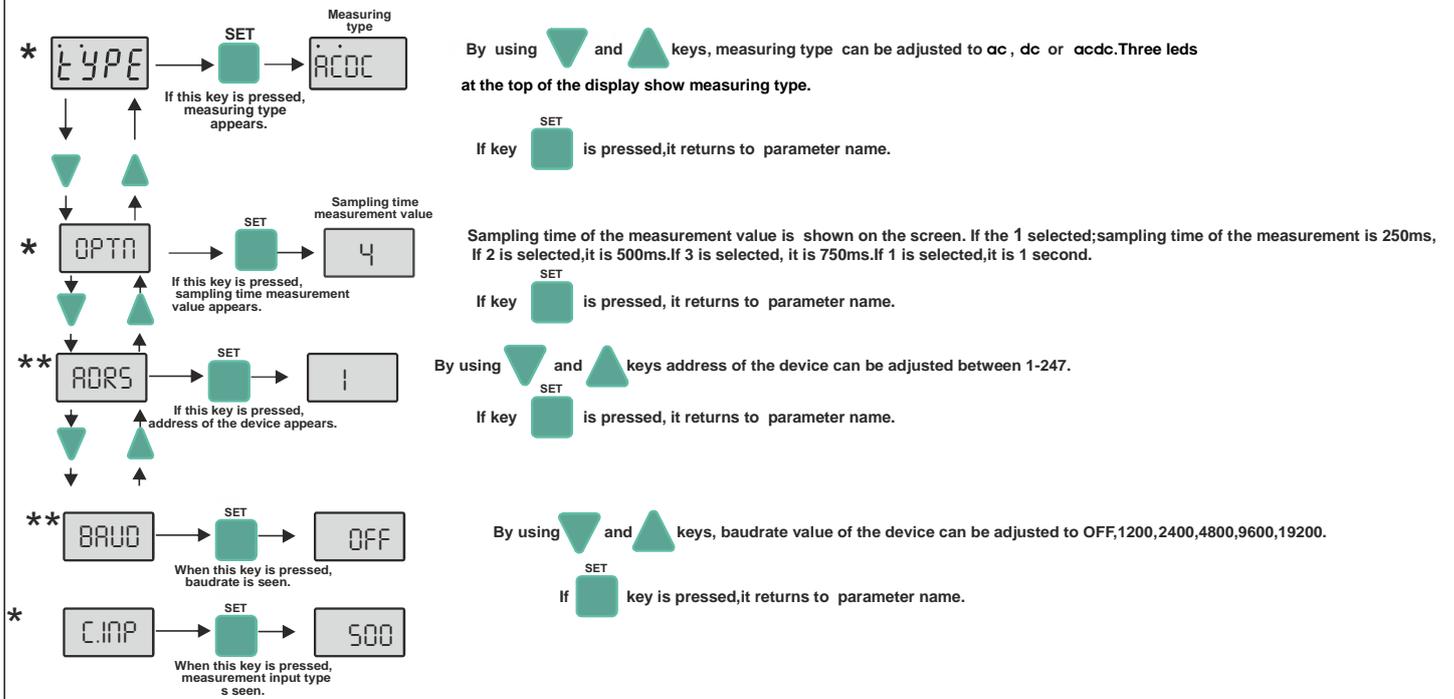

(*) There are only ,TYPE, optn, CInp parameters in the devices those have no relay.

(**)The AdrS and baud parameters are only in the devices those have modbus.

If any key is pressed in 25 seconds or the device is powered down and powered up ,then it returns to operation mode.

NOTE: If key is held down while the device is powered up, the d.PAr message will appear and the factory settings will be restored.

Factory settings restored after CInp;50,HYSL and HYSU are set to "1.00"

If C. InP input type "500" is selected, the measurement terminals 9 and 12 of the terminals must be connected. Otherwise the measurement is done incorrectly.

If Cinp input type "50" is selected, the measurement terminals 10 and 11 of the terminals must be connected. Otherwise the measurement is done incorrectly.

ERROR MESSAGES



Means, measured current value is higher than maximum scale.



Means, measured current value is lower than minimum scale.